

超声波毛孔清洁器
使用说明书

感谢您购买本产品。为了正确使用本产品，使用前请务必阅读此说明书；为了在需要的时候可以随时阅读说明书，请您妥善保管此说明书。

关于本说明书：
本说明书所示产品图片及相关产品特征介绍，以及一些名词的解释，仅可作参考，用户使用时以实物为准，所引用的数据来自本公司实验室。

一、安全注意事项

使用前请务必阅读[安全注意事项]。
请按照说明书内容及建议正确使用本产品。
产品使用后应及时清洁以避免油脂及其残余物的积聚。

⚠ 危险 错误操作会导致人身伤害的相关内容

⚠ 注意 错误操作会导致人身安全或财产损失的相关内容

⚠ 危险

- 请使用本产品随机配送的充电线和符合产品要求的充电器来充电，并正确将充电器插头与家用插座连接，以避免导致故障、起火或因发热而引起火灾。
- 由于本产品内置可充电电池，请勿将本产品置入水中或在高温、高热的环境中使用，这可能会导致故障、起火或因发热而引起火灾。
- 如果产品发生变形、破损或有异味，请勿再使用，以避免发生触电和火灾的危险。

⚠ 注意

- 预防危险发生，请勿与医疗用电子仪器同时使用。
- 做过心脏手术或携带心脏起搏器、埋入式除颤器等放置于体内的医疗用电子仪器的人群，使用前请咨询您的保健医生。
- 如果您对金属过敏，请不要使用本产品。

1

2

3

二、部件说明

※ 机器出厂设定为10分钟定时关机

三、使用操作

【充电】
首次使用，请先将机器充满电后再使用。
将机器连接上充电线和充电器，并插上家用电源插座；
充电中，指示灯亮红光；充满电后，指示灯熄灭；
充电时间大约需要3小时。
充满电可使用大约15天（每天10分钟）。
根据使用情况，使用天数会有些不同。

Ultrasonic Skin Scrubber
Manual

Thank you for purchasing this product! In order to use this product correctly, please read this manual before use; in order to read the manual at any time when you need it, please keep this manual in a safe place.

About this manual:
The product pictures and related product features shown in this manual, as well as some nouns, can only be used as a reference. The user will use the actual product as the standard, and the referenced data comes from the company's laboratory.

Safety Precautions

Be sure to read the safety precautions before use. Please use this product correctly according to the contents and recommendations of the manual.
The product should be cleaned in time after use to avoid accumulation of grease and its residues.

⚠ Danger Related content: Incorrect actions can lead to personal injury

⚠ Caution Related content: Incorrect operation can result in personal safety or property damage

⚠ Danger

- Please use the charging cable supplied with this product and the charger that meets the product requirements to charge, and properly connect the charger plug to the household socket to avoid malfunction or fire caused by heat.
- Since this product has a built-in rechargeable battery, do not put it in a fire or use it in a high temperature environment, which may cause malfunction or fire due to heat.
- If the product is deformed, damaged, or smelly, do not use it to avoid the risk of electric shock and fire.

⚠ Caution

- To prevent the occurrence of danger, do not use it with medical electronic equipment.
- It is strictly forbidden to use a person who has undergone cardiac surgery or a medical electronic device such as a pacemaker or an embedded defibrillator placed inside the body.
- Do not use this product if you are allergic to metal.

1

※ When using, the shovel should be used at an angle of about 45 degrees to the skin surface.
※ Please do not use this product in the larynx, eyeball, mucous membranes, etc.
※ (Face) Care should be taken on both the left and right sides; the back neck and other parts can also be used.
※ Do not stop at somewhere on the face when using it, it should move slowly.

Key Points

- From the outer corner of the eye, consciously lift the skin.
- From the chin to the cheeks from the inside out, pull up and move.
- From the chin, consciously lift the skin.
- From the forehead to the hairline. Pull up from the forehead to the hairline.
- Follow the contours of the face gently to the areas that need care.
- From the inside of the ear, from top to bottom.

After the nursing, if there is residual nutrients on the face, it can be wiped or cleaned.

5

Fault Resolution

Situation	Possible Reason	Measure
Sudden shut down during use	The battery has reached the end of its life The battery is not fully charged	Please contact after-sales department for replacement or repair Fully charge and use it again
When charging, the charging indicator is not on	Host and plug are not connected The battery goes into standby	Reconnect the host and charger It is normal for the battery to be recharged for 6-30 minutes. It needs to be fully charged before use.
Shovel without vibration	Loose internal lines Shovel deformation	Please contact after-sales department for replacement or repair Please contact after-sales department for repair.
machine does not start	Low battery	Fully charge the host and use it again

If the machine still does not work properly, please stop using and contact the after-sales department.

Maintenance

- Please turn off the power before cleaning.
- Protect the appliance from moisture and do not place the appliance in a dishwasher or microwave oven.
- The machine should not be rinsed with water. It can be cleaned with a soft, damp cloth and wiped with a soft, dry cloth.
- Do not use sharp or corrosive, volatile thinner cleaners.
- Do not shake the stainless steel shovel or check it by hand when cleaning.

After-sales

- This appliance is intended for personal use only and is not suitable for commercial use.
- We offer a one-year warranty on the product, which is calculated from the date of purchase. During the warranty period, we will replace parts or the entire product due to the material or the production process.

6

Part Identification

※ The machine is set to 10 minutes to shut down.

How to Use

【Charging】
For the first time, please fully charge the machine before using it.

- Connect the machine to the charging cable and charger, and plug into the household power socket;
- During charging, the charging indicator lights up red;
- When fully charged, the charging indicator is off;
- Charging time takes about 3 hours;
- Fully charged for about 15 days (10 minutes a day);
- The number of days used will vary somewhat depending on usage.

3

【使用前准备】

- 准备好常用的精华、洁肤液等护肤品；
- 按日常的卸妆步骤卸妆；
- 用湿润的化妆棉清洁干净铲片。

【清洁净肤】

- 将洁肤液或清水涂抹于皮肤上（图1）。
- 按一下开机关开机。此时指示灯长亮，铲片发出“吱吱”的振动声，机器启动。
- 手握住机器，将铲片（弯折位朝下，如图2）沿着需要清洁的部位慢慢移动。随着铲片与皮肤接触，水花四溅（如果皮肤表面不够湿，需要再补充水或洁肤液），皮肤上的污垢油脂等随着水花导出肌肤。
- 护理结束后，再按一下开机关关机。
- 用化妆棉或干净的布将皮肤的水或洁肤液擦拭干净。

【营养护肤】

- 取适量的美容液或美容 喱，涂于面部、颈部等需护理部位。（如图3）
- 按一下开机关开机。此时指示灯长亮，铲片发出“吱吱”的振动声，机器启动。
- 手握住机器，将铲片（弯折位朝上，如图4）沿着需要护理的部位慢慢地移动按摩，将营养液渗入到肌肤。
- 护理结束后，再按一下开机关关机。
- 做完护理后，如果脸上有残留美容液，可擦拭或清洗干净。

4

【护理手法】

※ 使用时铲片要倾斜于皮肤表面45°左右使用。
※ 请不要在喉结、眼球、粘膜部位使用本产品。
※ (脸部)左右两侧都应进行护理；后颈等部位也可以使用。
※ 使用时不要在面部的某处固定停留，要慢慢移动。

5

四、故障排除

现象	可能原因	措施
使用中突然关机	电池已达到使用寿命 电池没充满电	请联系售后部门更换维修 将主机充满电再使用
充电时，充电指示灯不亮	主机、插头没连接好 电池进入休眠状态	重新连接好主机和充电器 电池需要充电6-30分钟的苏醒时间，高于正常现象，需充满电再使用
铲片无振动	内部线路松动 铲片变形损坏	请联系售后部门更换维修 请联系售后部门维修
机器不能启动	电量不足 如果机器仍不能正常使用，请停止使用并联系客服。	将主机充满电再使用

五、清洁维护与保养

- 清洁前，请先关机。
- 保护本器具远离潮湿，切勿将本器具放在洗碗机或微波炉中。
- 铲片可以用水龙头冲洗，但不能将整机浸泡在水中清洗。
- 不要使用尖锐的或有腐蚀性、挥发性稀释剂的清洁剂。
- 可以使用柔软的湿布来清洁并用柔软干燥的布来擦拭干净。

六、售后服务

- 本器具只适合个人家庭护理使用，不适合商业用途。
- 我们为产品提供为期1年的保修，保修期从购买日开始计算。在保修期内对于产品因材料或生产过程的瑕疵，我们会视情况更换零件或整个产品。
- 申请保修必须将本产品能够证明购买日期的证明（购买发票）一起交由工厂售后。
- 以下情况公司不保修：
- 由于使用不当造成的损坏，例如：使用错误的电源、将产

7

品插入不合适的插头、人为损坏等。
- 正常使用引起的产品老化、磨损，但对产品的使用功能影响不大。
- 用于其它用途，或操作不当或非专业维修者或使用非本公司的配件，导致的产品问题。
- 易耗品、附赠配件等耗材配件。
- 因不可抗力因素（如雷电、地震、火灾、水灾等）造成的损坏。

九、规格参数

产品名称：超声波毛孔清洁器
工作电压：3.7V= 额定功率：3.0W
充电电源：5V=1A 毛重：172克
净重：89克
产品尺寸：187x46x20mm
包装尺寸：230x81x35mm

装箱清单：主机1台，充电线1根，使用说明书1份。
注：有鉴于不断改进产品的一贯方针，本公司保留改变产品规格的权利，实物以出货为准。

8

【Preparation before Use】

- Prepare skin care products such as essential essences and cleanser;
- Remove makeup according to the daily makeup removal procedure;
- Clean the shovel with a moist cotton pad.

【Cleaning】

- Apply cleanser or water to the skin (Figure 1).
- Press the power button to turn it on. At this time, the indicator light is on, the shovel produces a vibration sound, and the machine starts.
- Hold the machine with your hand and move the shovel (with the bend down) slowly along the area you need to clean. As the shovel comes into contact with the skin, the water splashes (if the skin surface is not wet enough, it needs to be replenished with water or cleanser). The dirt, oil, etc. on the skin are cleaned out to the skin with water.
- After the end of the nursing, press the power button again to shut down.
- Wipe the water or cleanser on the skin with a cotton pad or a clean cloth.

【Nutritional skin care】

- Take a proper amount of beauty lotion or beauty gel and apply it on the face, neck and other areas to be treated. (Figure 3)
- Press the power button to turn it on. At this time, the indicator light is on, the shovel produces a vibration sound, and the machine starts.
- Hold the machine with your hand and slowly move the shovel (with the bend up, as shown in Figure 4) along the area to be treated, and let the nutrient solution penetrate into the skin.
- After the end of the nursing, press the power button again to shut down.
- Wipe the water or cleanser on the skin with a cotton pad or a clean cloth.

4

※ When using, the shovel should be used at an angle of about 45 degrees to the skin surface.
※ Please do not use this product in the larynx, eyeball, mucous membranes, etc.
※ (Face) Care should be taken on both the left and right sides; the back neck and other parts can also be used.
※ Do not stop at somewhere on the face when using it, it should move slowly.

Key Points

- From the outer corner of the eye, consciously lift the skin.
- From the chin to the cheeks from the inside out, pull up and move.
- From the chin, consciously lift the skin.
- From the forehead to the hairline. Pull up from the forehead to the hairline.
- Follow the contours of the face gently to the areas that need care.
- From the inside of the ear, from top to bottom.

After the nursing, if there is residual nutrients on the face, it can be wiped or cleaned.

5

Fault Resolution

Situation	Possible Reason	Measure
Sudden shut down during use	The battery has reached the end of its life The battery is not fully charged	Please contact after-sales department for replacement or repair Fully charge and use it again
When charging, the charging indicator is not on	Host and plug are not connected The battery goes into standby	Reconnect the host and charger It is normal for the battery to be recharged for 6-30 minutes. It needs to be fully charged before use.
Shovel without vibration	Loose internal lines Shovel deformation	Please contact after-sales department for replacement or repair Please contact after-sales department for repair.
machine does not start	Low battery	Fully charge the host and use it again

If the machine still does not work properly, please stop using and contact the after-sales department.

Maintenance

- Please turn off the power before cleaning.
- Protect the appliance from moisture and do not place the appliance in a dishwasher or microwave oven.
- The machine should not be rinsed with water. It can be cleaned with a soft, damp cloth and wiped with a soft, dry cloth.
- Do not use sharp or corrosive, volatile thinner cleaners.
- Do not shake the stainless steel shovel or check it by hand when cleaning.

After-sales

- This appliance is intended for personal use only and is not suitable for commercial use.
- We offer a one-year warranty on the product, which is calculated from the date of purchase. During the warranty period, we will replace parts or the entire product due to the material or the production process.

6

※ When using, the shovel should be used at an angle of about 45 degrees to the skin surface.
※ Please do not use this product in the larynx, eyeball, mucous membranes, etc.
※ (Face) Care should be taken on both the left and right sides; the back neck and other parts can also be used.
※ Do not stop at somewhere on the face when using it, it should move slowly.

Key Points

- From the outer corner of the eye, consciously lift the skin.
- From the chin to the cheeks from the inside out, pull up and move.
- From the chin, consciously lift the skin.
- From the forehead to the hairline. Pull up from the forehead to the hairline.
- Follow the contours of the face gently to the areas that need care.
- From the inside of the ear, from top to bottom.

After the nursing, if there is residual nutrients on the face, it can be wiped or cleaned.

5

- To apply for a warranty, the product must be shipped to an authorized Kskin repair station or factory along with a certificate (purchase invoice) that proves the date of purchase.
- The company does not guarantee the following conditions:
 - Damage caused by improper use, such as using the wrong power supply, inserting the product into an improper socket, man-made damage, etc.
 - The product caused by normal use is aging and wear, but it has little effect on the function of the product.
 - Product problems caused by other uses, or improper handling or non-professional repairs or the use of accessories other than the company.
 - Consumables or bonus accessories.
 - Damage caused by force majeure factors (such as lightning, earthquakes, fires, floods, etc.).
- After-sales service does not include damage caused by the above reasons.

Specification

Product Name: Ultrasonic Skin Scrubber
Voltage: 3.7V= Rated Power: 3.0W Net Weight: 89g
Charging Power Supply: 5V=1A
Product Dimensions: 187x46x20mm
Packing List: 1 main unit, 1 charging cable, 1 manual.

Note: In view of the consistent policy of continuous improvement of products, the company reserves the right to change the product specifications, the actual goods are subject to shipment.

7